



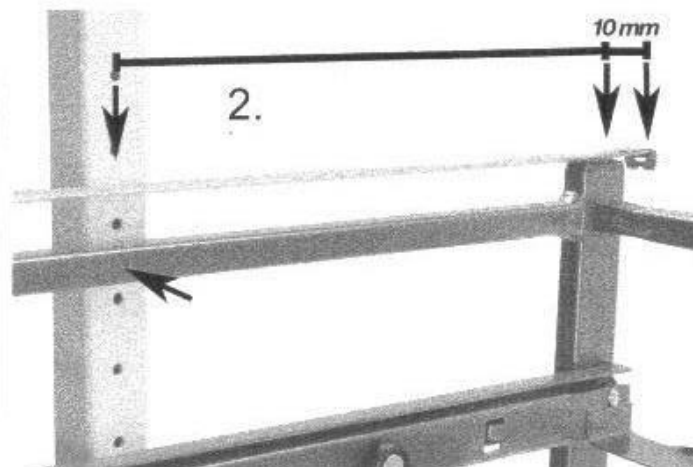

ROLA-CASE
ROLA-Shelf

Thomas Moloney Pty T/as On Site Systems
13 Kangoo Road Somersby NSW 2250
Phone 02 43401444 Fax 0243401400
Web www.rolacase.com Email enquiry@rolacase.com

Instructions for fitting Rolacase dual frame to 8 series Rola shelf frame

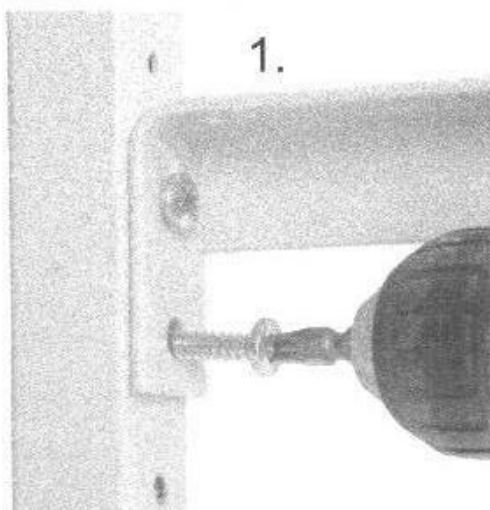

step1:
Fix RS BAR to desired position on 8 series frame with hardware supplied (4 x 12 gauge DOG HEAD self tapping screws)

step2:
Measure the distance from frame to wall of vehicle, allow 10mm gap and position dual frame, Mark drill point on frame.

step3:
Drill through frame with 4.5mm drill.

step4:
Attach dual frame to 8 series frame with clip at top of dual frame on both sides .

step5:
Attach dual frame to RS BAR with self drilling button head screws one either end and one in the middle or by using 5x 25mm bolt and nut . Holes will need to be drilled for bolts.

Note : steps 1 to 4 apply to both right and left sides of frame attach work top last so as to allow easy access when installing Rolacase frame .

