




ROLA-CASE

THOMAS MOLONEY Pty Ltd

ASSEMBLY INSTRUCTIONS

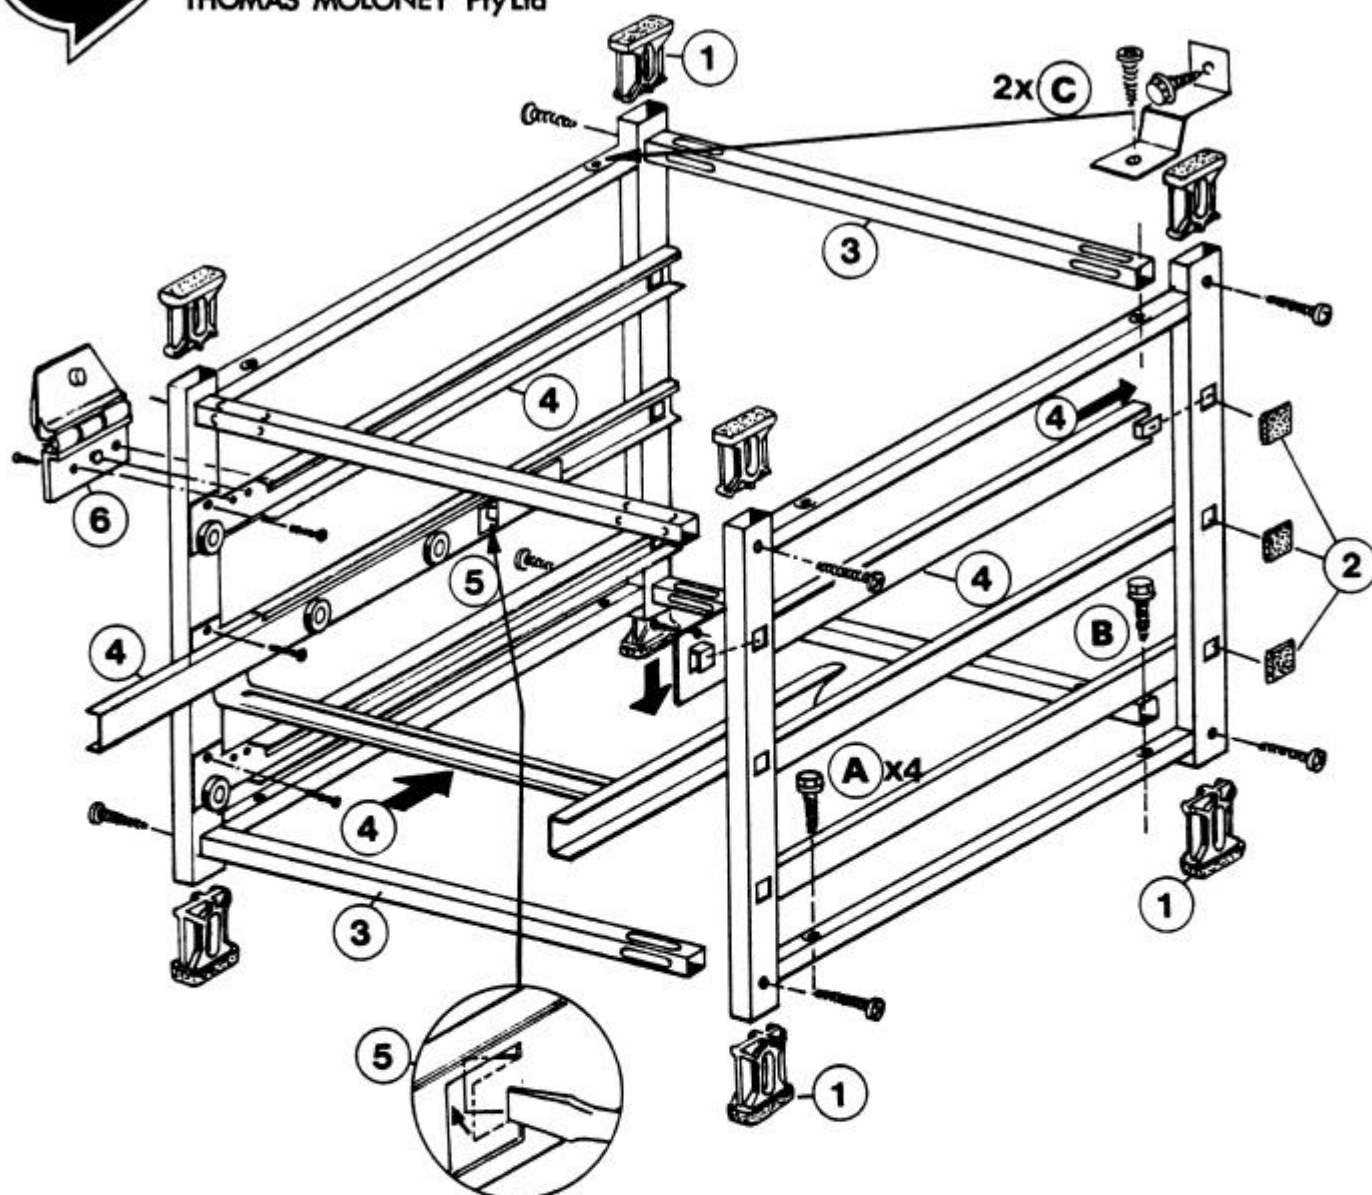

Instructions:

- 1: *Insert 8 end caps in tube.
- 2: Fit cover plugs.
- 3: Assemble cross members to side frame.
(4 or 6 cross members depending on model)
- 4: Insert (carriages/draw slides) in frame as illustrated.
- 5: Bend tags in (carriage/draw slide) to lock 3-4mm.
- 6: Fit case retainers with screws supplied.

*



Must be inserted before attempting assembly.

- * For correct vehicle installation to ensure product life:
- A: Mount on level surface.
 - B: Secure base in 4 locations.
 - C: Secure top in 2 locations. Use bracket + screws as shown - affix to vehicle. (Parts not supplied)

RC 2FR
RC 3FR
RC 5FR